

Every MUGEN

35881-XNH -KOSO ENGINE START / STOP SWITCH

(For gasoline vehicles)

Installation • Instruction manual

This time, Thank you for purchasing MUGEN products..

After understanding the following notes correctly, Please install it..

After installation, Please be sure to give this book to the customer..

please note

1. After unpacking, Immediately check that the package contents (see component list) are not missing or damaged..

2. Compatible model N-BOX (JF3.4) CIVIC (FK7.8) (FC1) CR-V (RW1.2)

3 Processing of this product. Bad assembly. For problems and accidents caused by misuse, We are one Responsibility

Please note that we do not bear any responsibility.

If you have any questions, please contact us at the following.

2-15-11 Hizaoricho, Asaka City, Saitama Prefecture 351-8586

Product Business Division, Product Division, M-TEC Co., Ltd.

[Business Hours 10: 00 ~ 17: 00 (excluding Saturdays, Sundays, public holidays, and regular holidays designated by us)]

TEL. O 48-46 2-3131 FAX. O O 48-46 2-3121

To customers

1. Installation of this product. When repairing, be sure to go to a specialty store or maintenance shop that handles automobile electrical parts..

Installation by the customer who purchased it. Repair. Never disassemble it.


2 We will handle any problems or accidents that occur without observing the precautions in this manual. one I am not responsible for it

please note that.

[Culturing parts list]

| No. | PARTS NAME. | QTY. |
|-----|--------------------------------|------|
| ① | Engine star - To / stop switch | 1 |

①

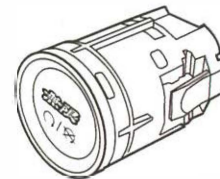

1. ▢ Installation of engine start / stop switch

"Note" ▢ Njinsta - Be careful not to damage the switch / stop switch and interior panel.

Work with caution.

① Battery - Remove the negative terminal of.

② Service - Standard engine star according to the screw manual - Remove the to / stop switch.

③ Engine star in the reverse procedure of removal - Install the to / stop switch, Restore.

④ Battery - Connect the negative terminal of and start the engine.

⑤ Check each part for any abnormalities.